


# Integral Surface Kit



The Integral Surface Kit allows any Integral product to be surface mounted while also providing strain relief with the built-in snap cable clamp. Two M3 screws are secured below the Integral during installation providing a streamlined aesthetic.


## Data Specifications

### Dimensions - VS-I-SMW (with C1 Installed)

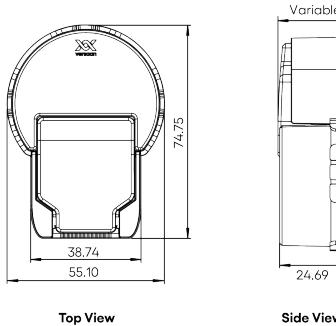

### Surface Mount

1. Install 2x M3 screws provided with the Integral Surface Kit (fig 4). Screw centres are 25mm apart.
2. Press Integral into the Surface Kit. The snap locks will click into place (fig 5).
3. Install wiring as per wiring schematic (fig 1).
4. Press the strain relief down until it firmly locks against the cable (fig 7). Install complete.

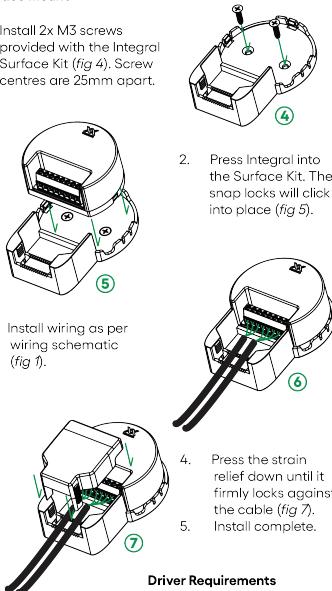

### Driver Requirements



## Order Codes

Product SKU	Description
VS-I-SMW	Integral Surface Kit - White

## Technical Specification

<b>Dimensions (VS-I-SMW)</b>	74.75x55.10x24.69mm
<b>Mounting Screws</b>	2x M3 Flat Head
<b>Screw Centres</b>	25mm
<b>Material</b>	Flame Retardant ABS+PC
<b>Warranty</b>	5 Years